

08-13, dne 15.02.2021

EN - Manual for cash boxes TS.3006, TS.3008, TS.3010

Opening and closing the cash box

On the dial lock of the cash box set factory code: "000".

If the cash box is closed, turn the black knob clockwise. (The knob is on the front side of the cash box, on the left.) The cash box is open then.

Open the lid of the cash box.

Close the lid of the cash box, turn the black knob counterclockwise and turn the dial for not to be seen the opening code.

Cash box is locked.

Setting your own code

On the dial lock of the cash box set factory code: "000". Turn the black knob clockwise.

The cash box is open.

Open the lid of the cash box. Take out the plastic storage box for coins.

Inside of the cash box (on the opposite side of the dial lock), move button "RESET" to the right and up (from position A to position B, pic.1).

Set your own code. (Pic. 2.)

Move button "RESET" down and to the left (from position B to position A).


Close the lid of the cash box, turn the black knob (counterclockwise) and turn the dial lock for not to be seen your own opening code.

The cash box is locked.


Warning

We are not recommending to set the code of combination of the same numbers (for example "444").

Obr. 1

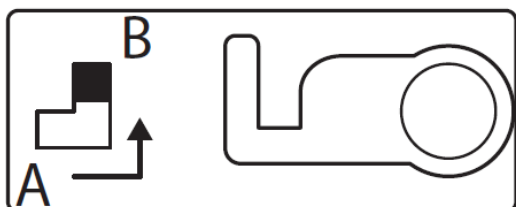

Obr. 2

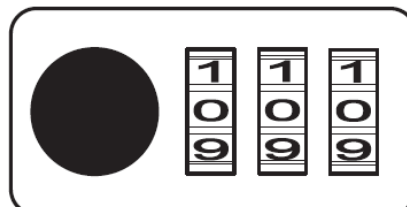

EN - You can find current manual on website: www.richterczech.cz/navody